

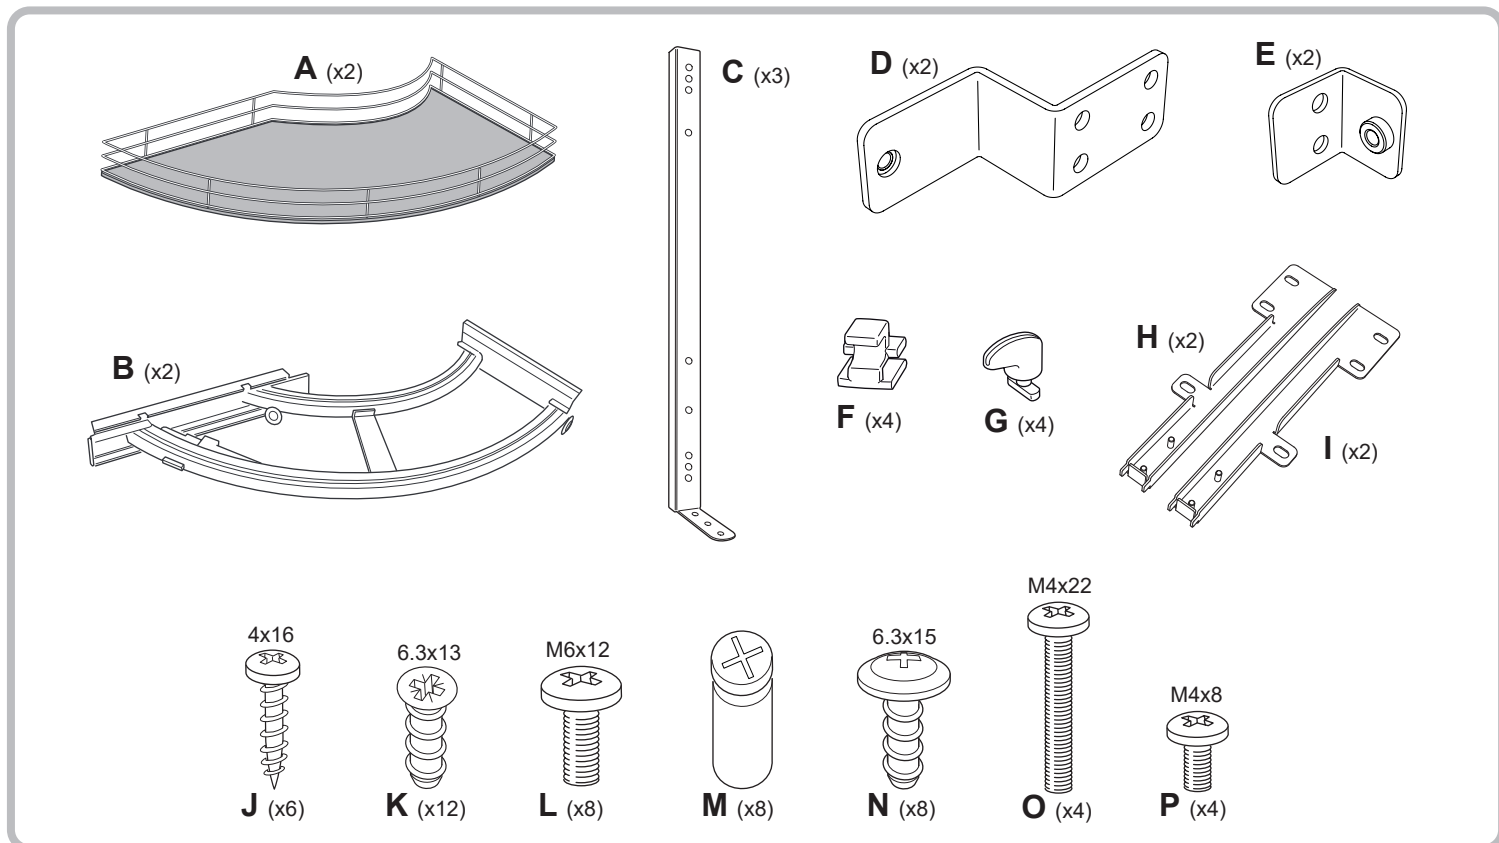
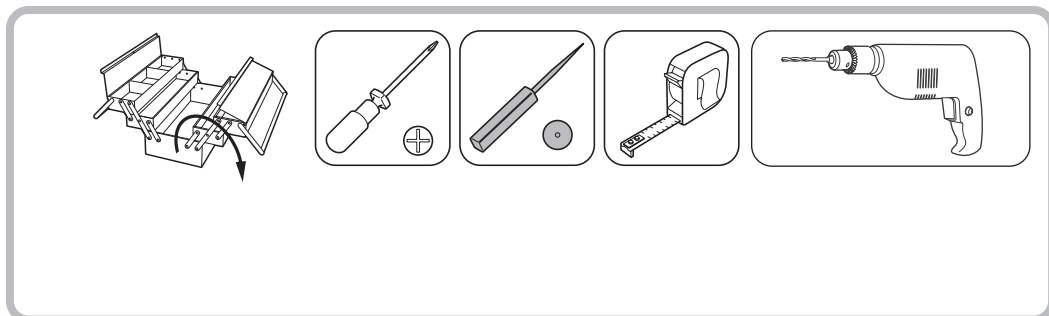
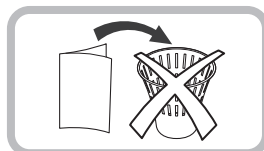
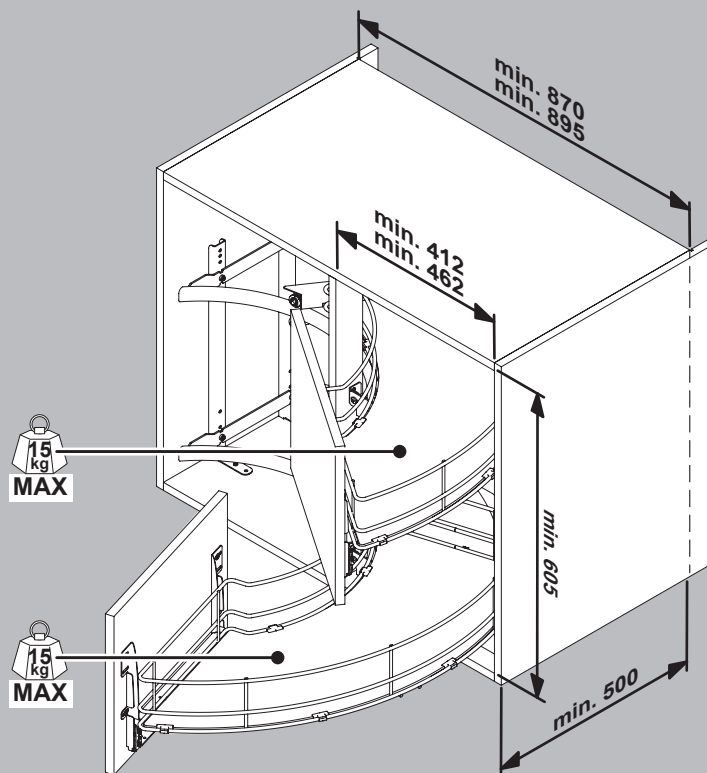
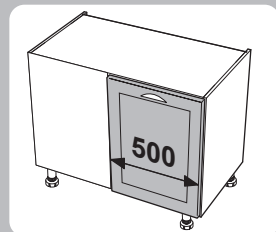
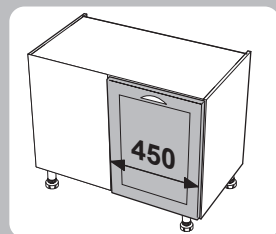



SENIO Eckschrankbeschlag, rechts Corner cabinet fitting, right hand version

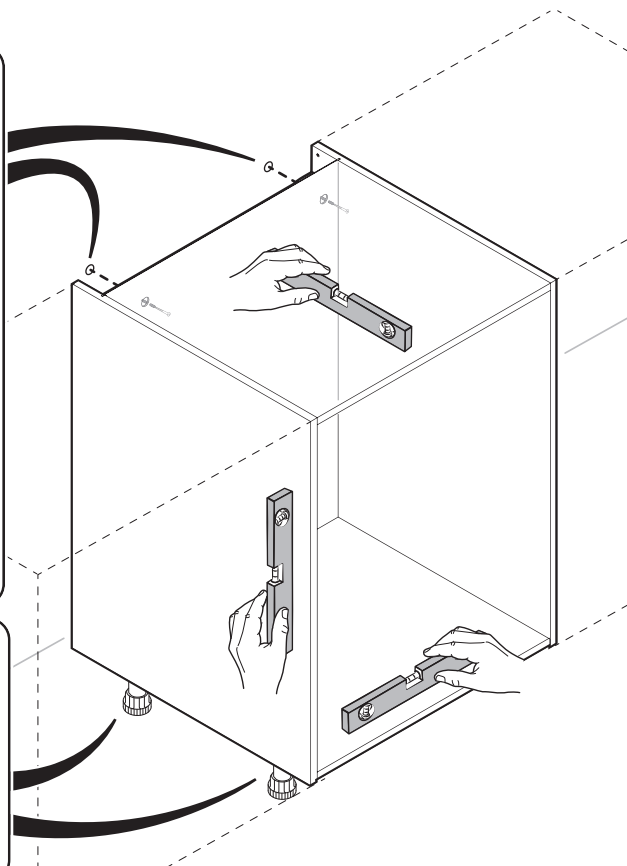

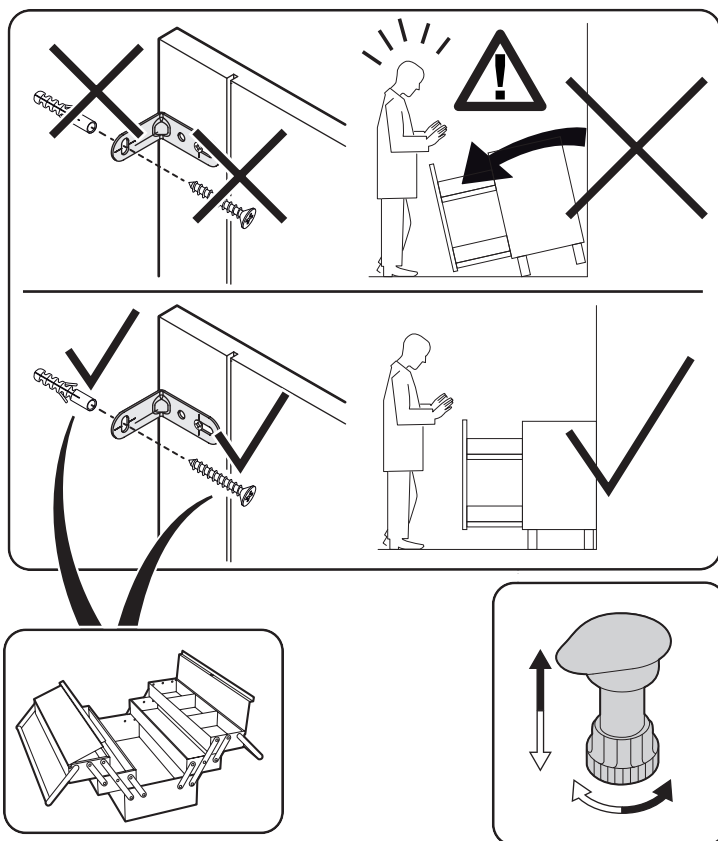



1

x8

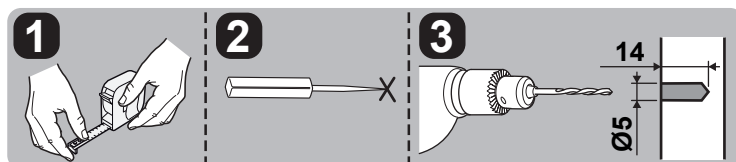


L ₁	L ₂
500	410
450	360


H ₁	H ₂
395-420	420
361-394	394
245-360	360

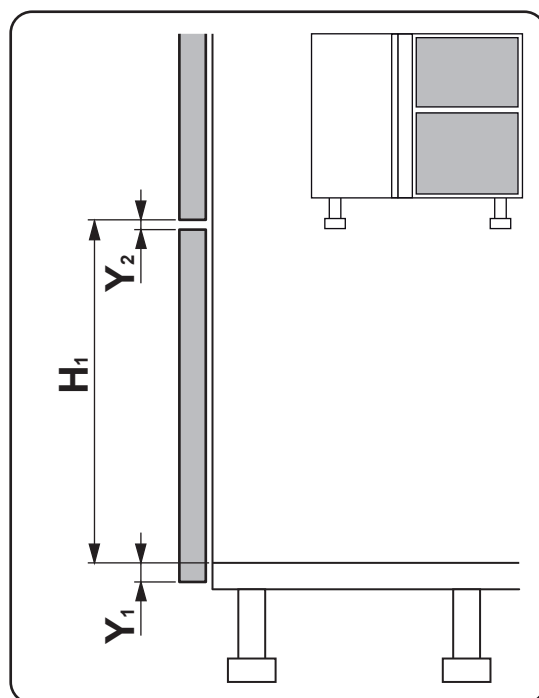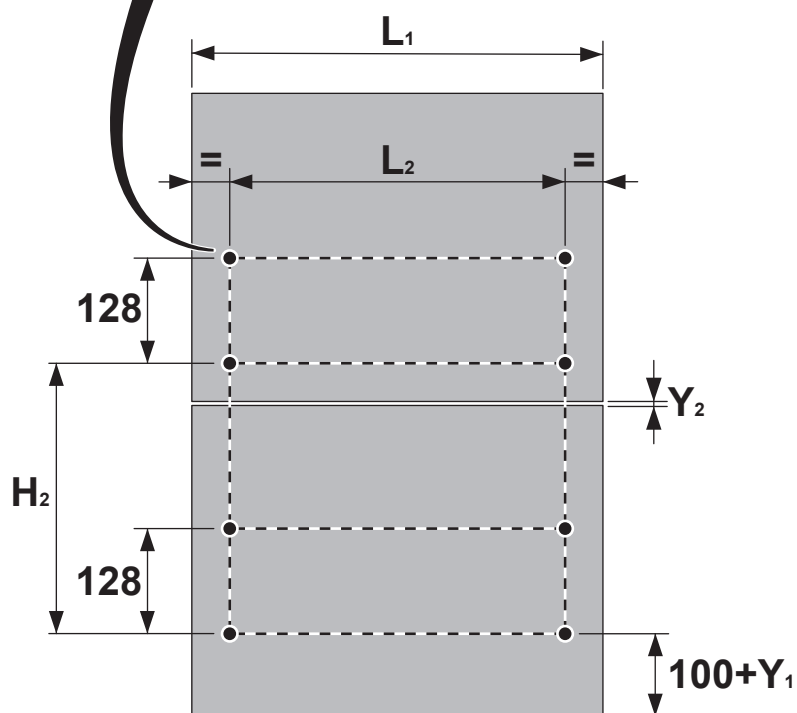

2




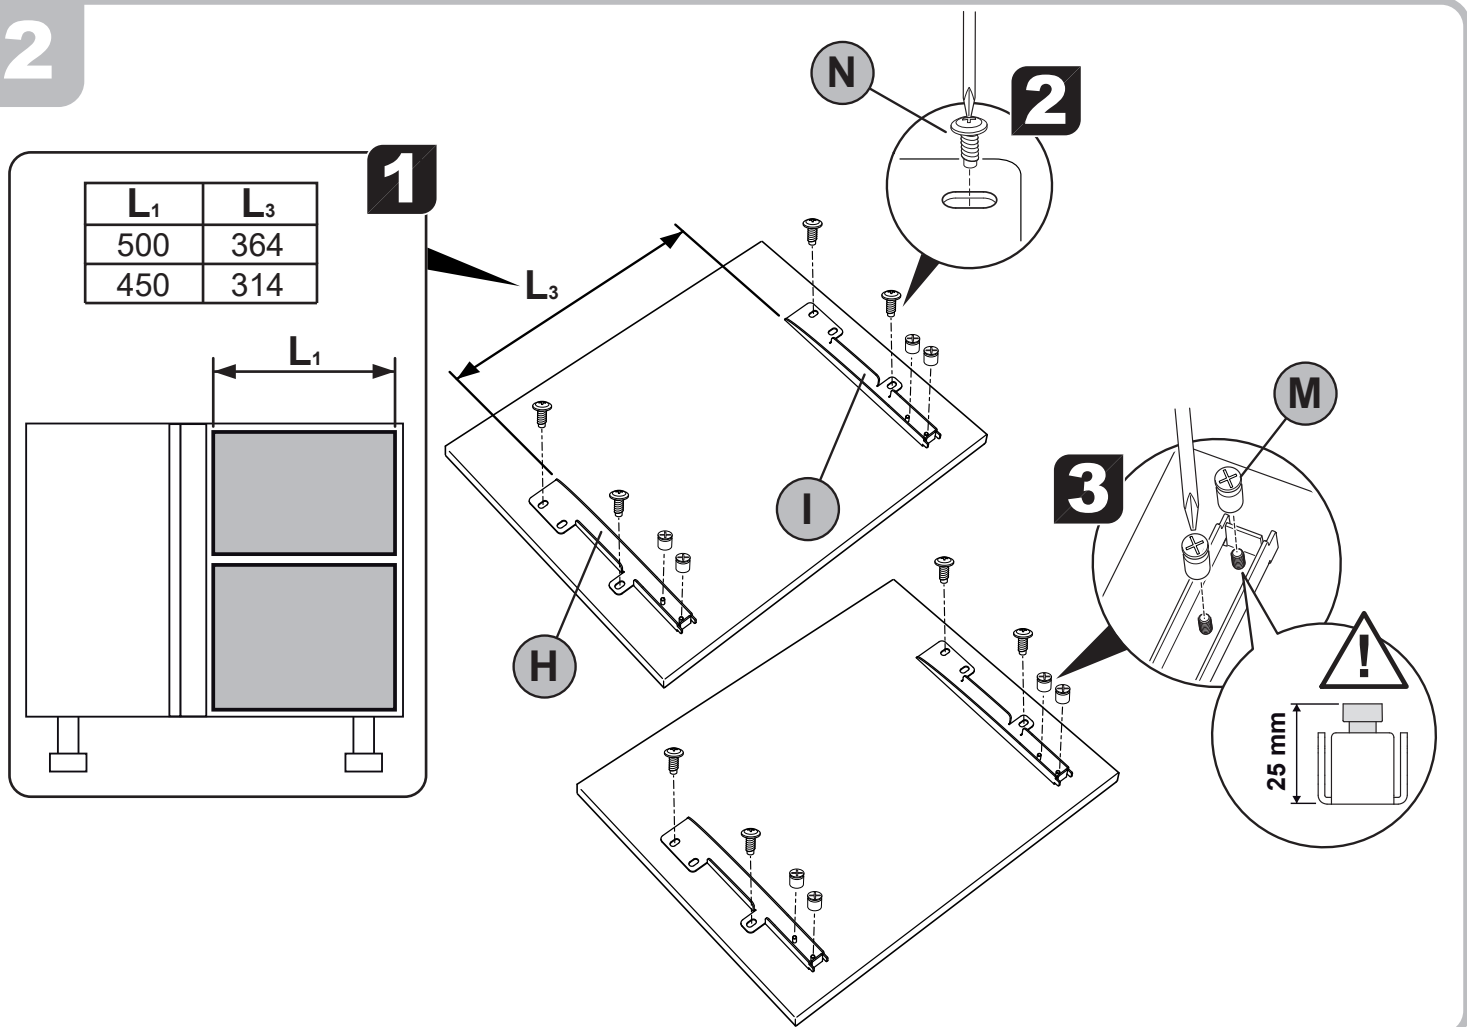


3



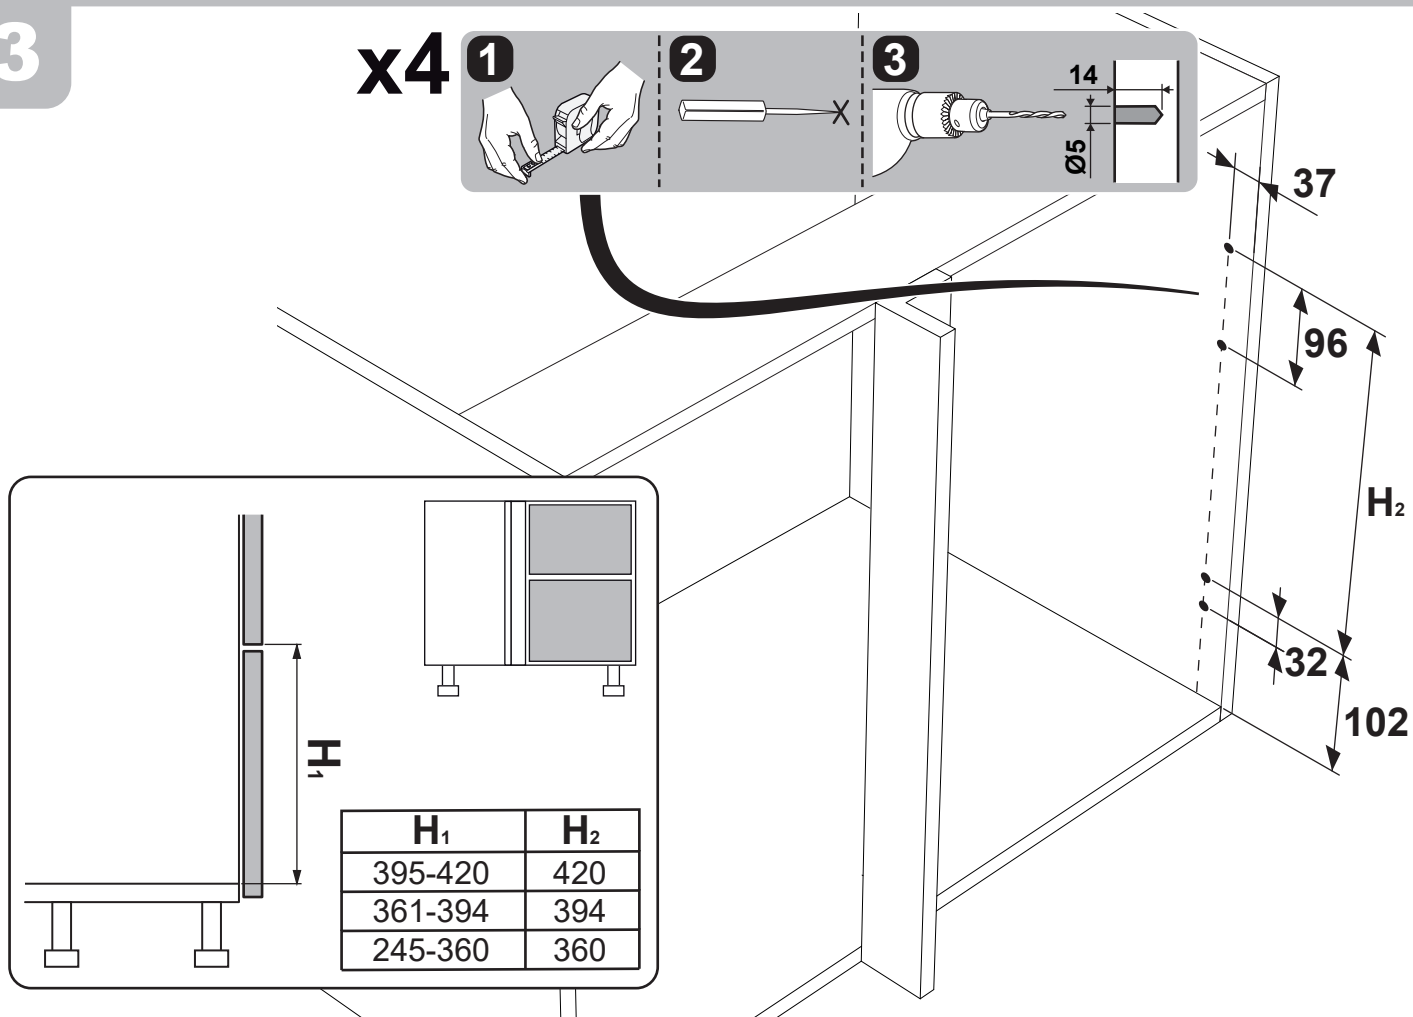


4


x4

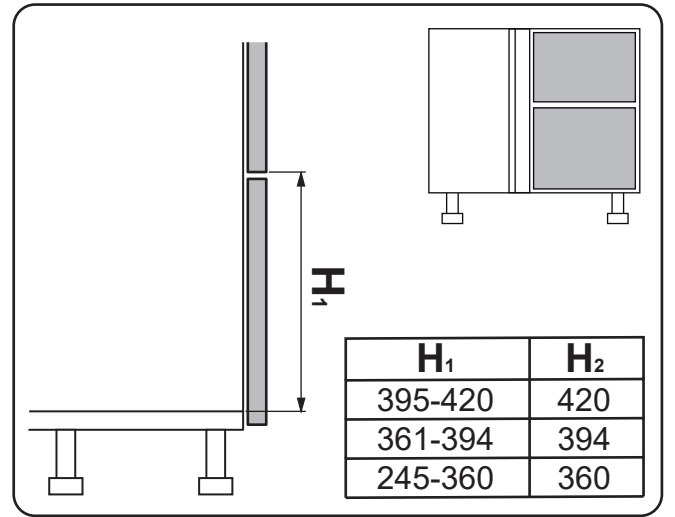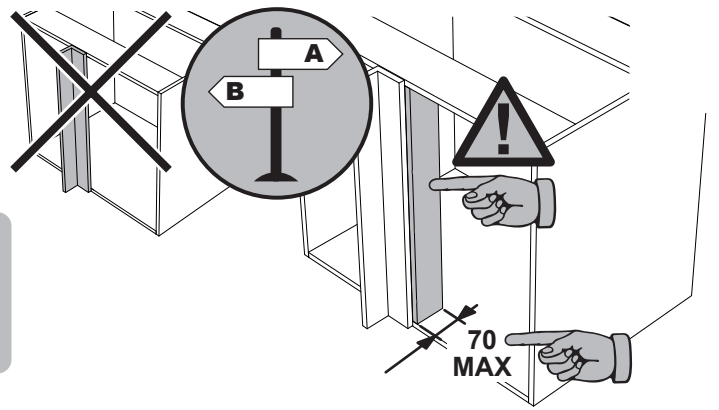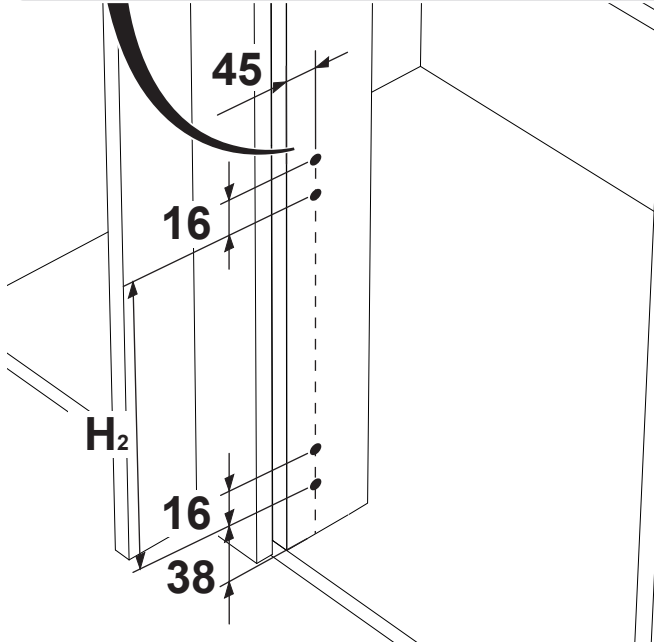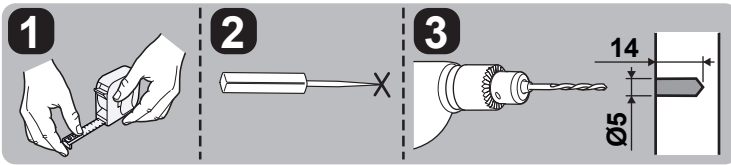


4

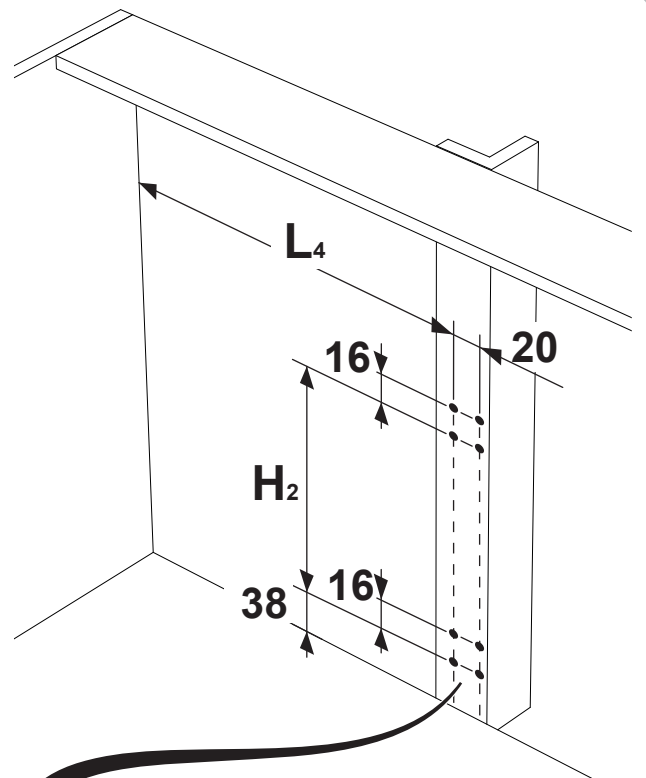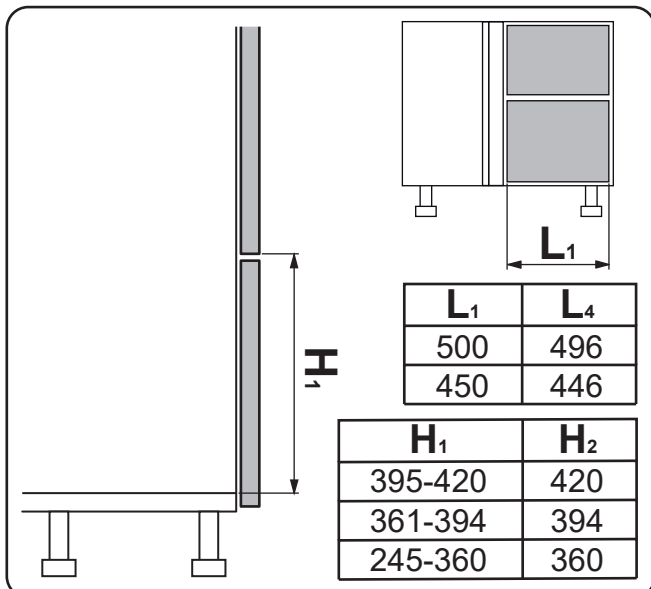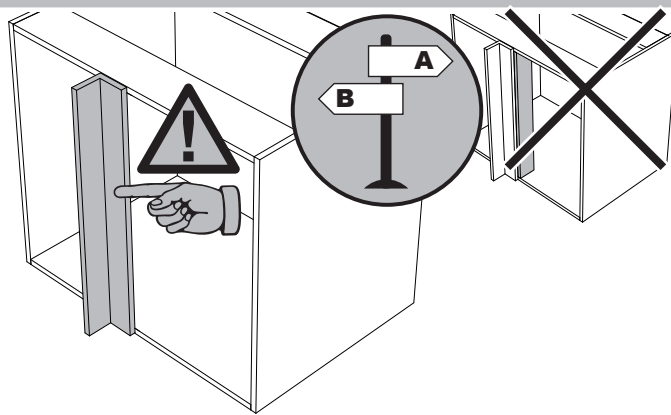


x8

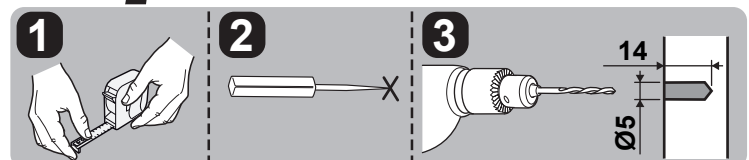

5

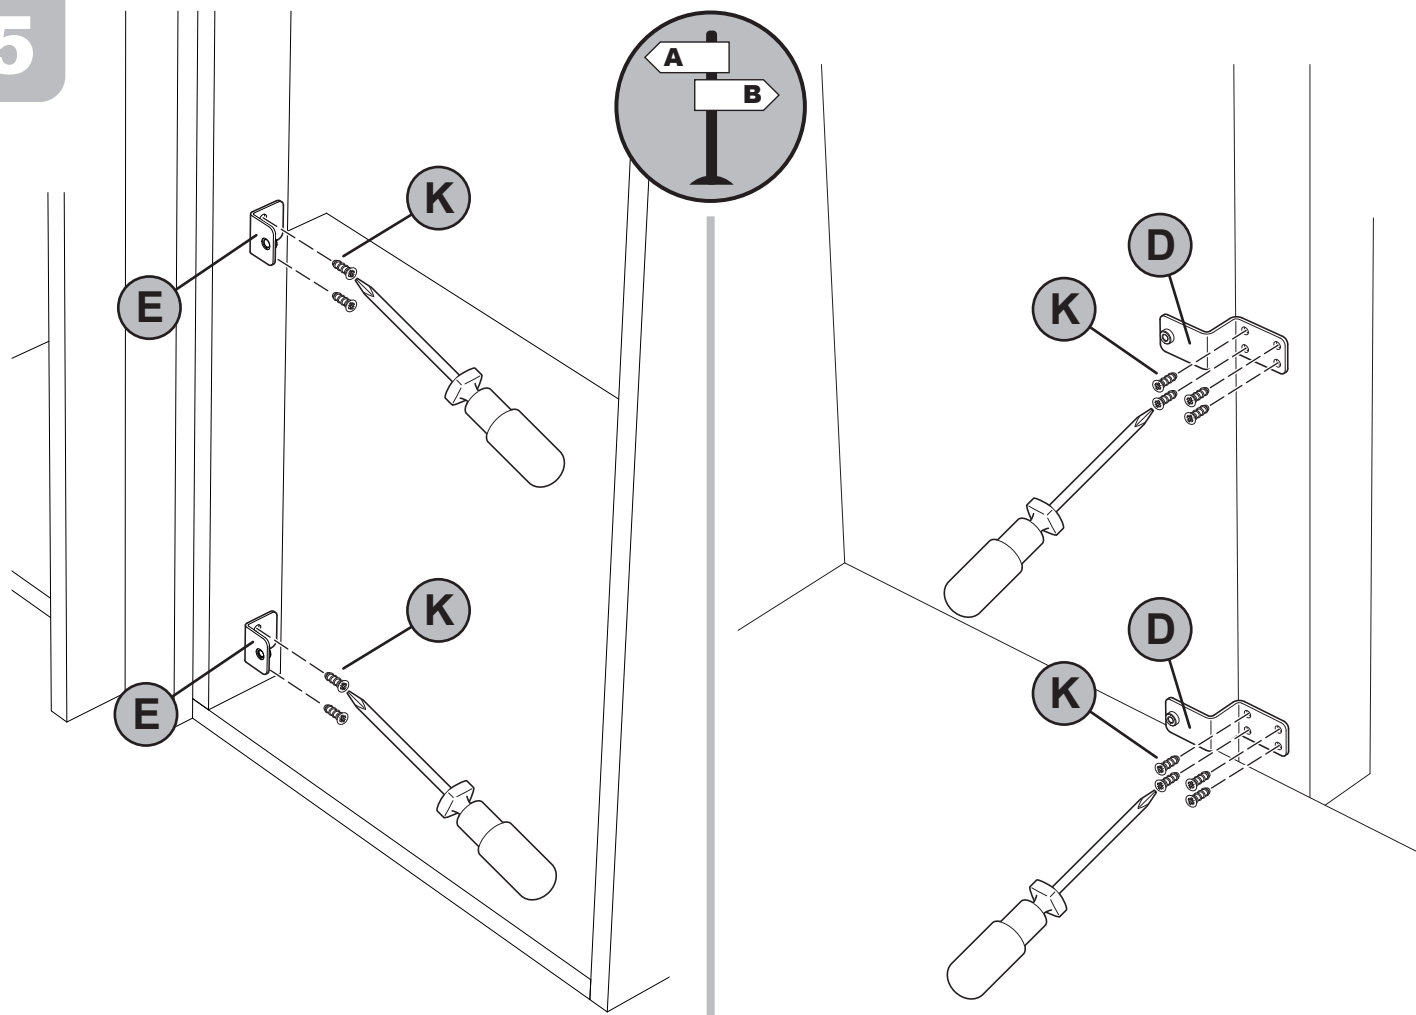


6

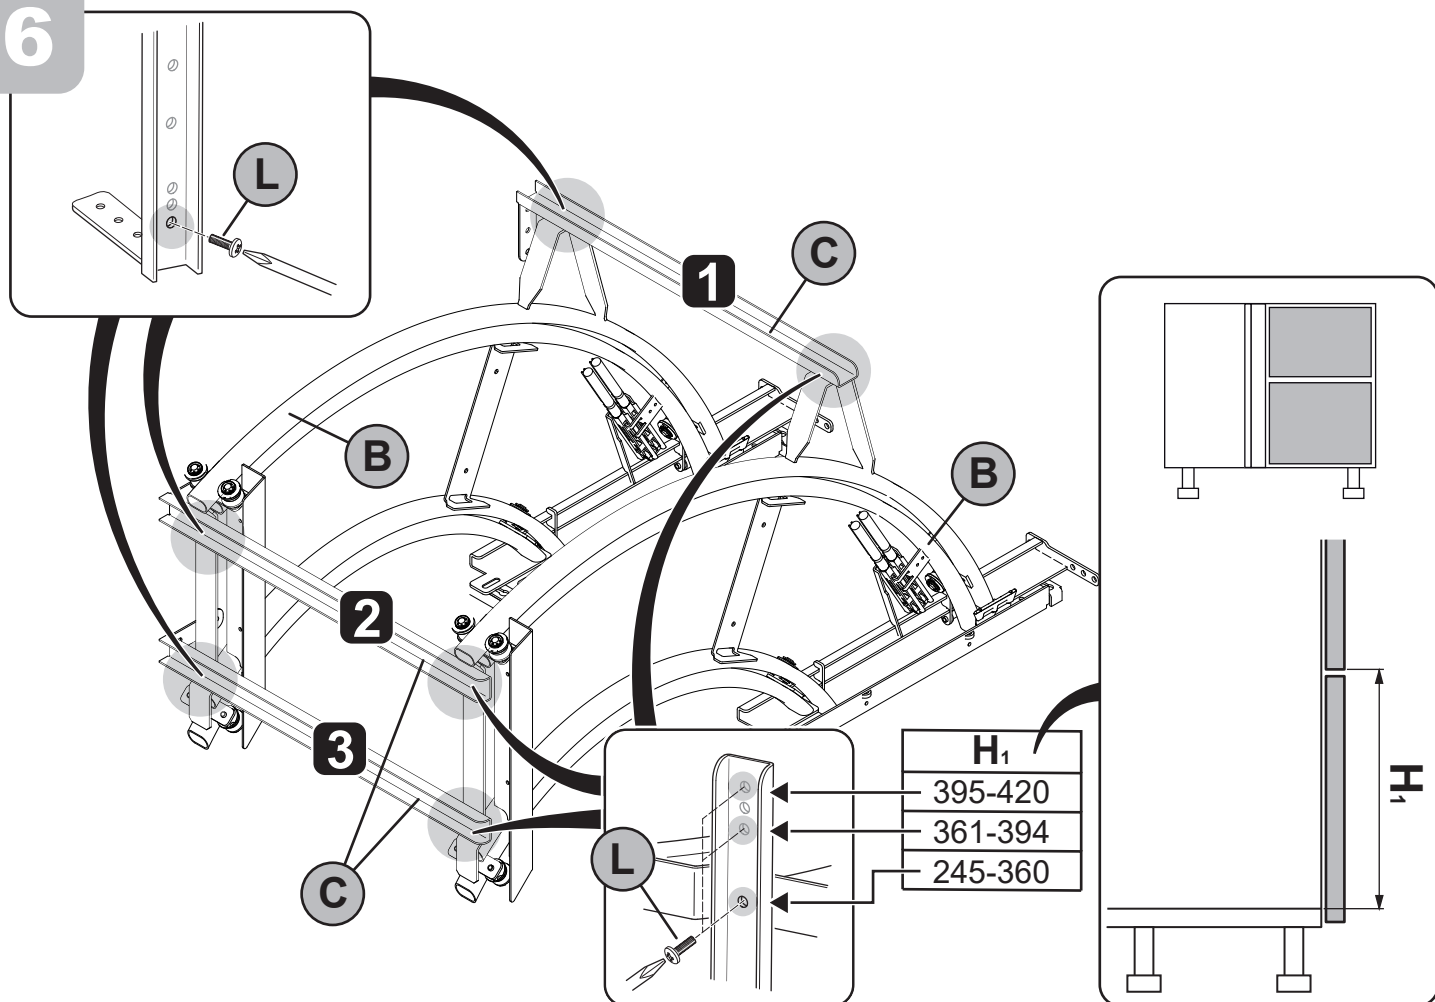


7


1

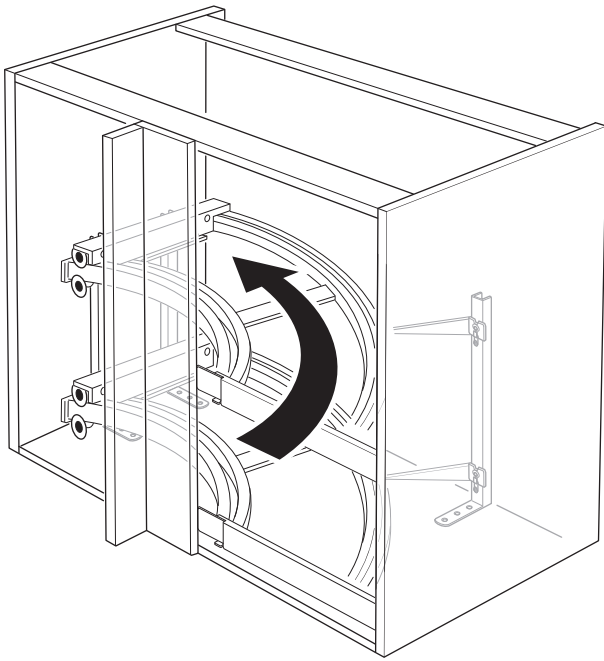

2

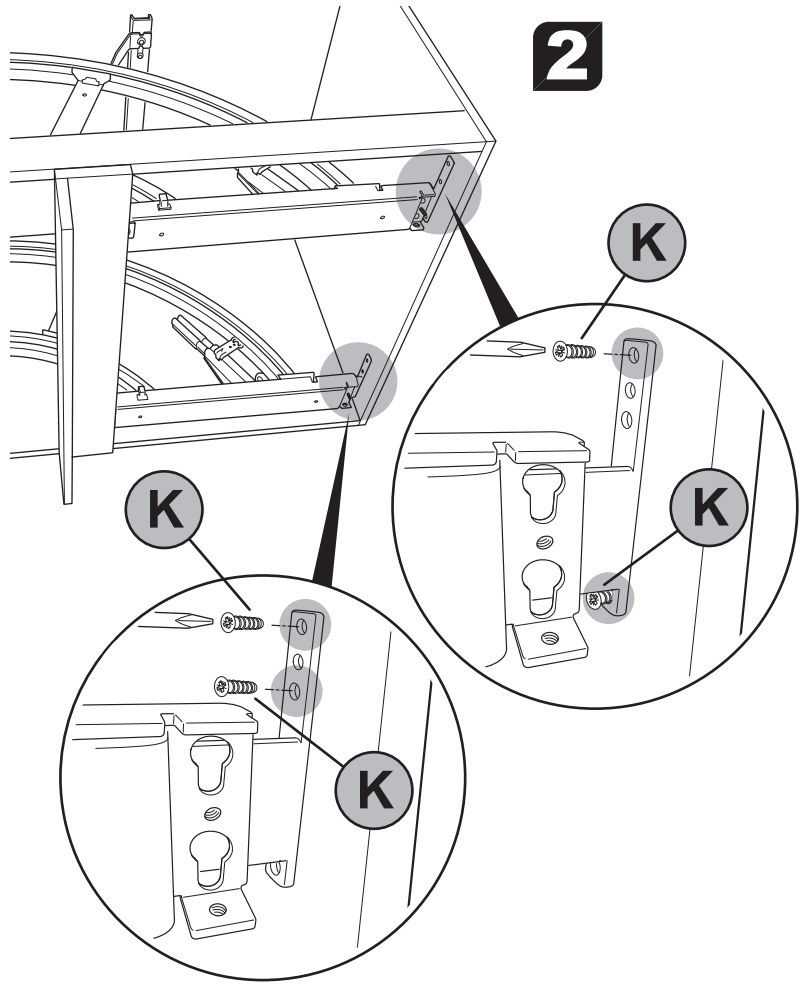

8

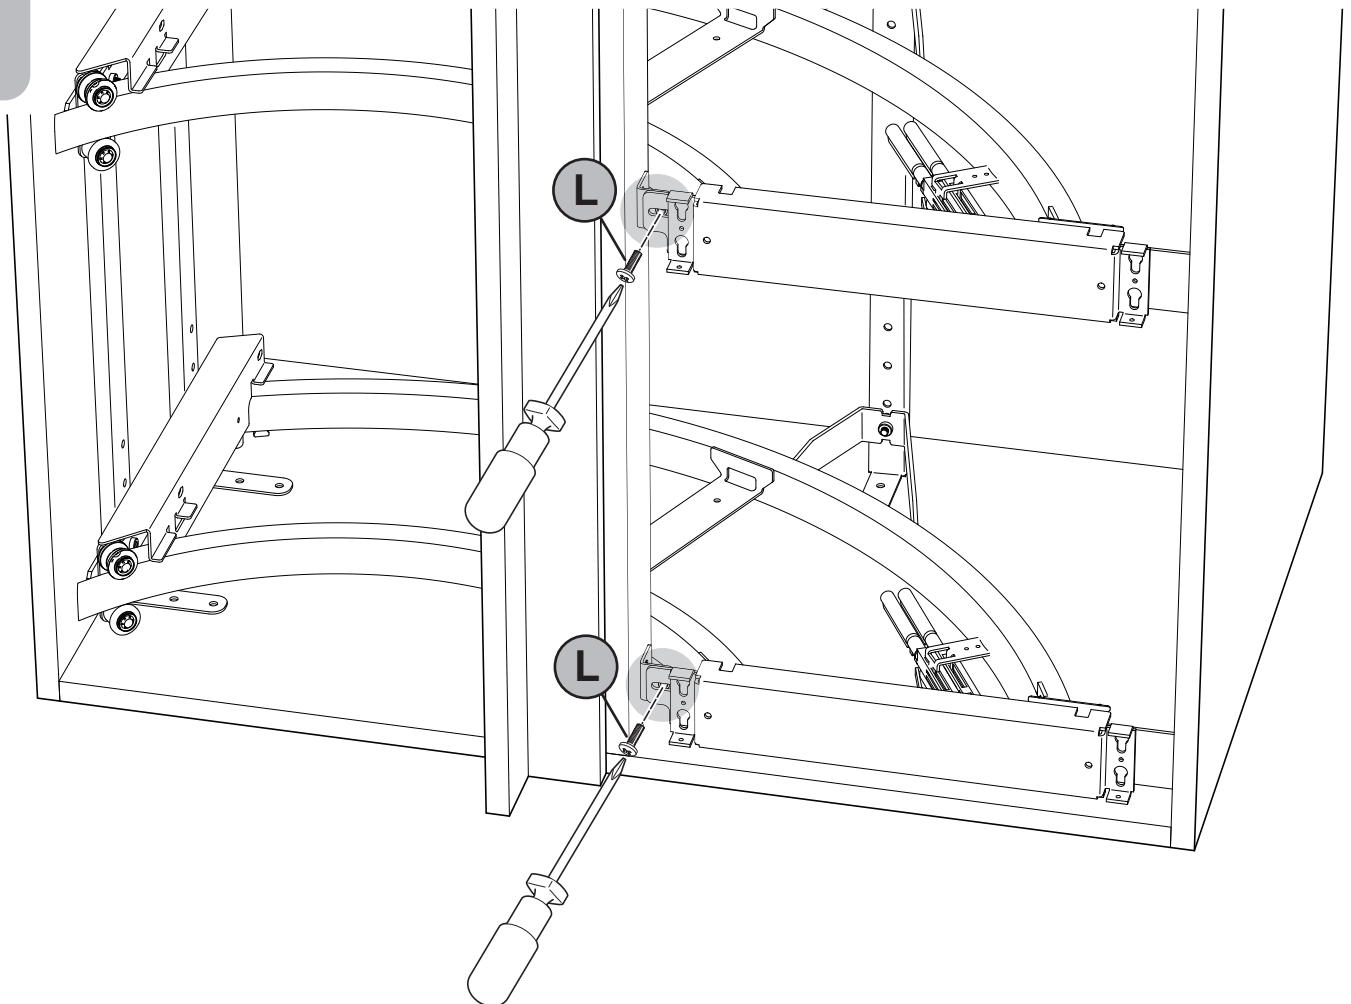

9

Diagram 9 illustrates the step of attaching the front panel to the cabinet. The main view shows the front panel being aligned with the cabinet's internal frame. A circular inset provides a detailed view of the attachment point, showing a screw (J) being inserted into a pre-drilled hole. A numbered sequence (1, 2) illustrates the steps: 1. Inserting the screw into the hole. 2. Tightening the screw with a screwdriver.

10


1 x4 **F**

2

3 **G**

A

11

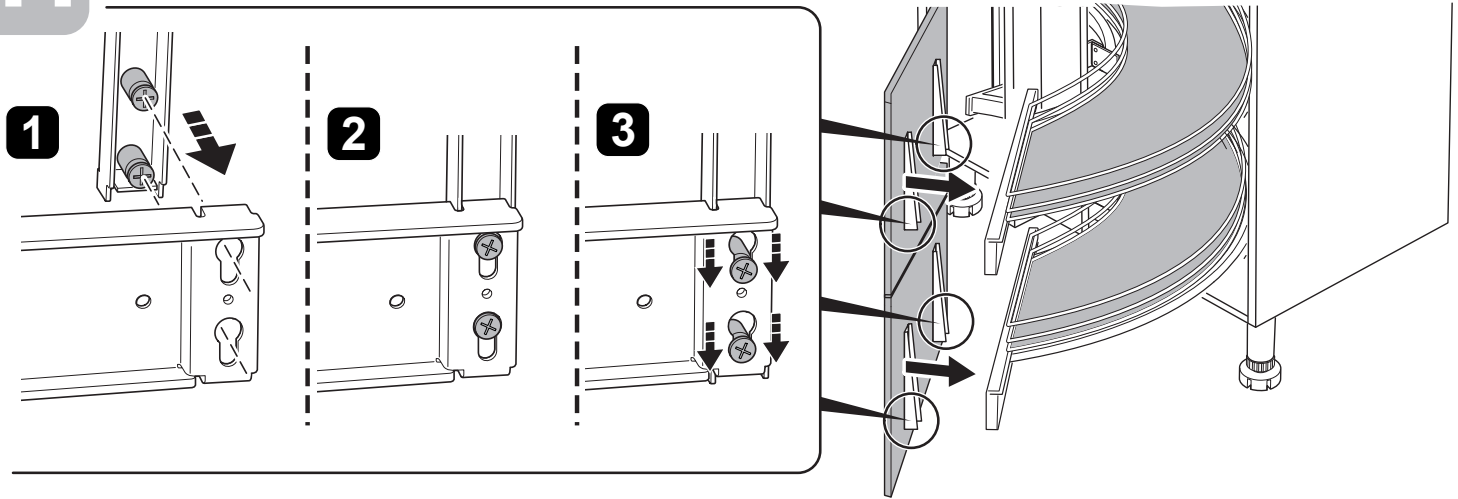

12

